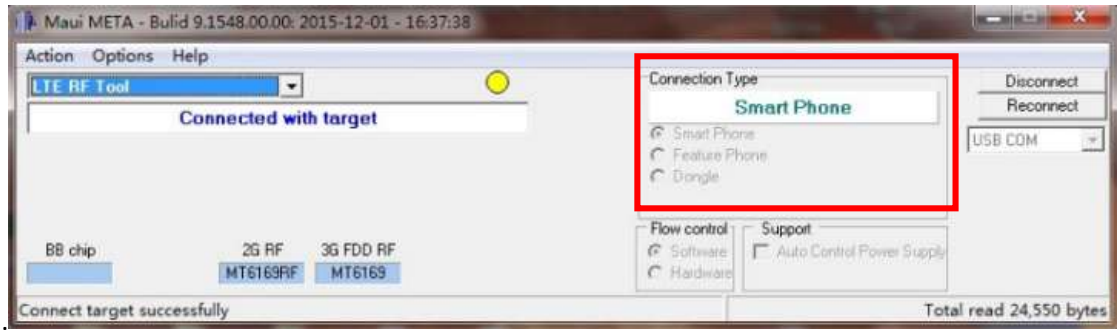
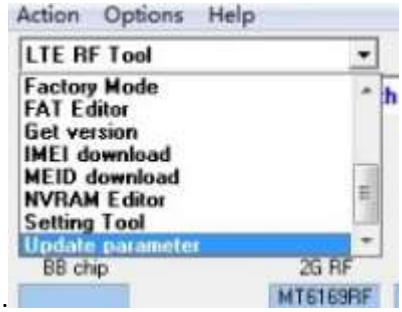
1.If handset not taking driver then to initialize the handset for this press Vol- and connect the data cable. There is no need to select META mode option only select smart phone in connection type..


2.Click Reconnect

3. 


4.Shut down the phone，connect usb cable to the computer. After connecting, select Update parameter


5. 

6.Following window pop up, select as the pic below:

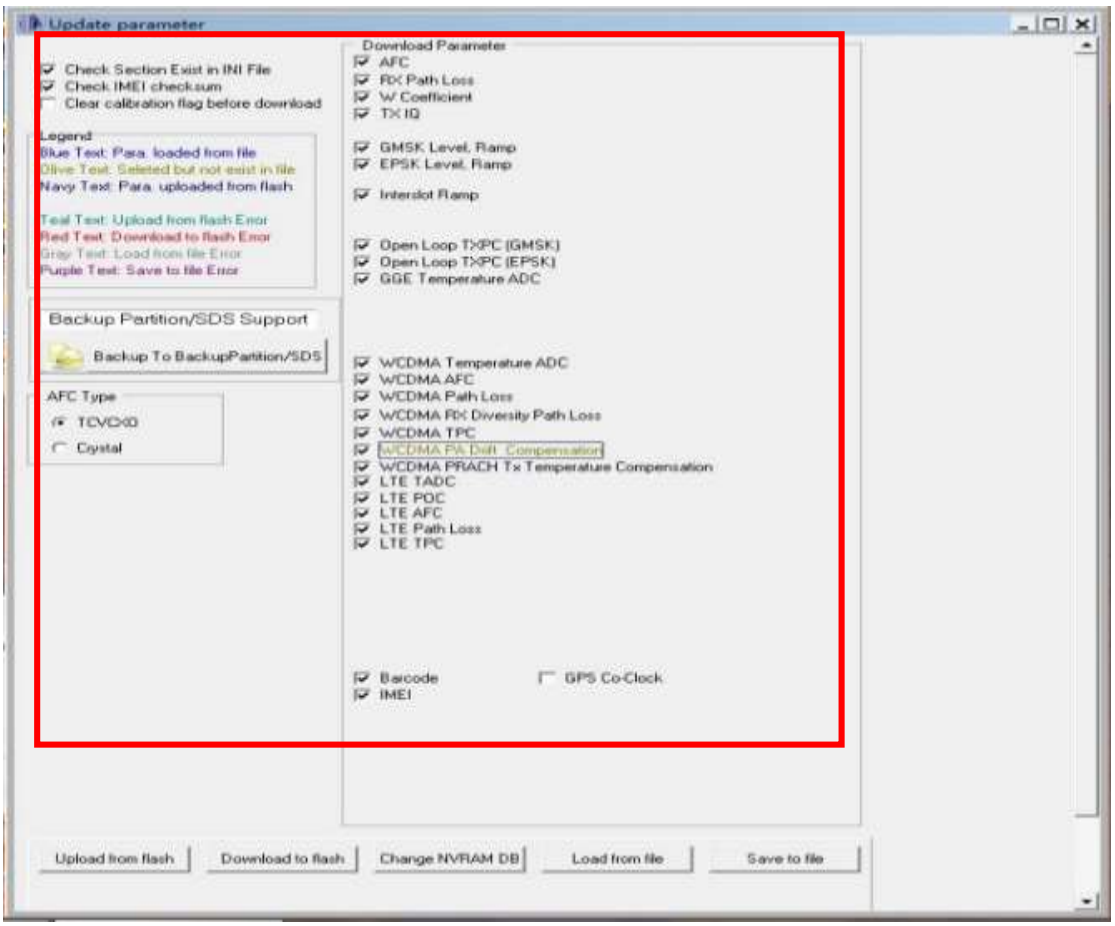


7.Click “Change NVRAM DB”, select according SW database file.

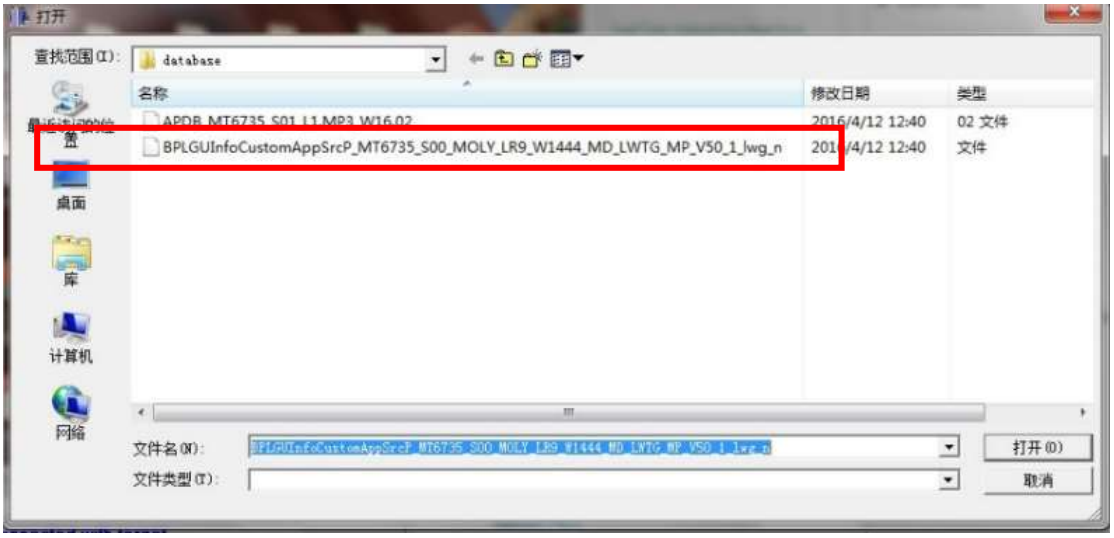

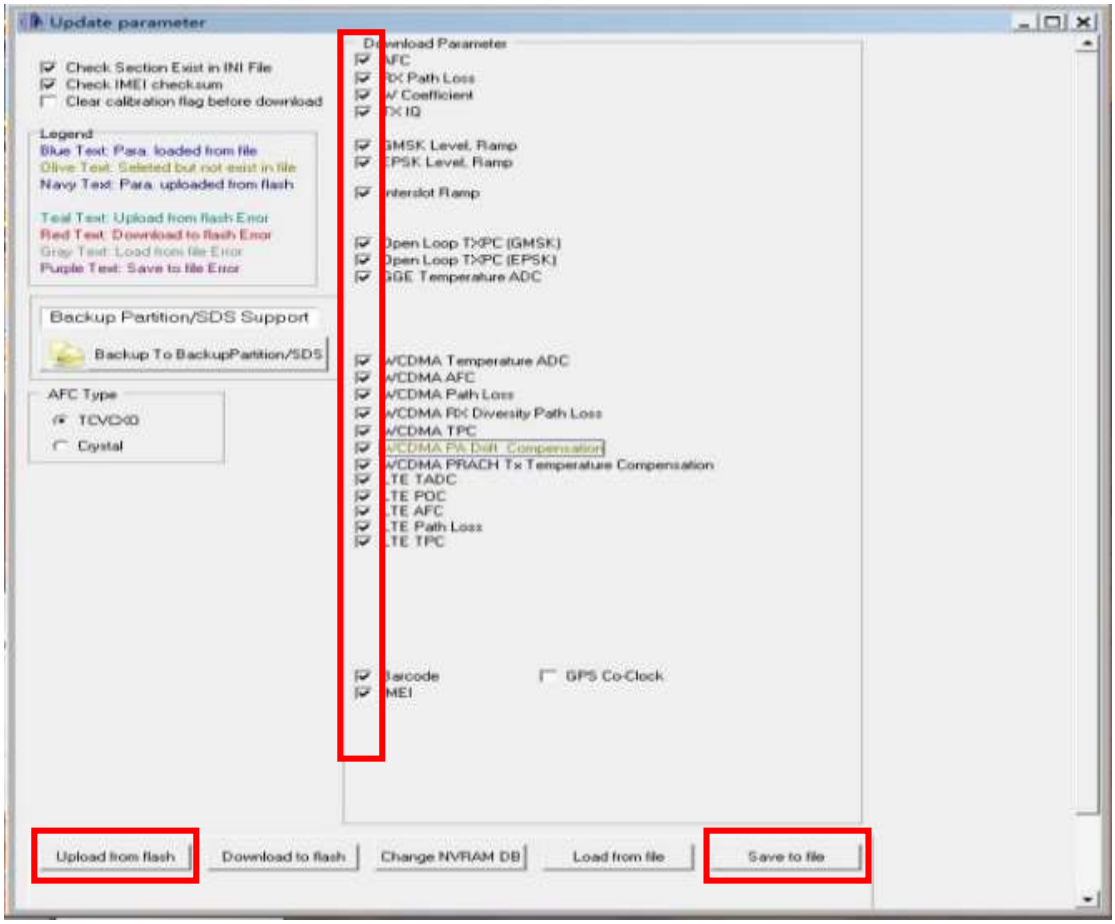

8.Now select upload from flash and select Save to file means to back up the calibration info as per desire location.

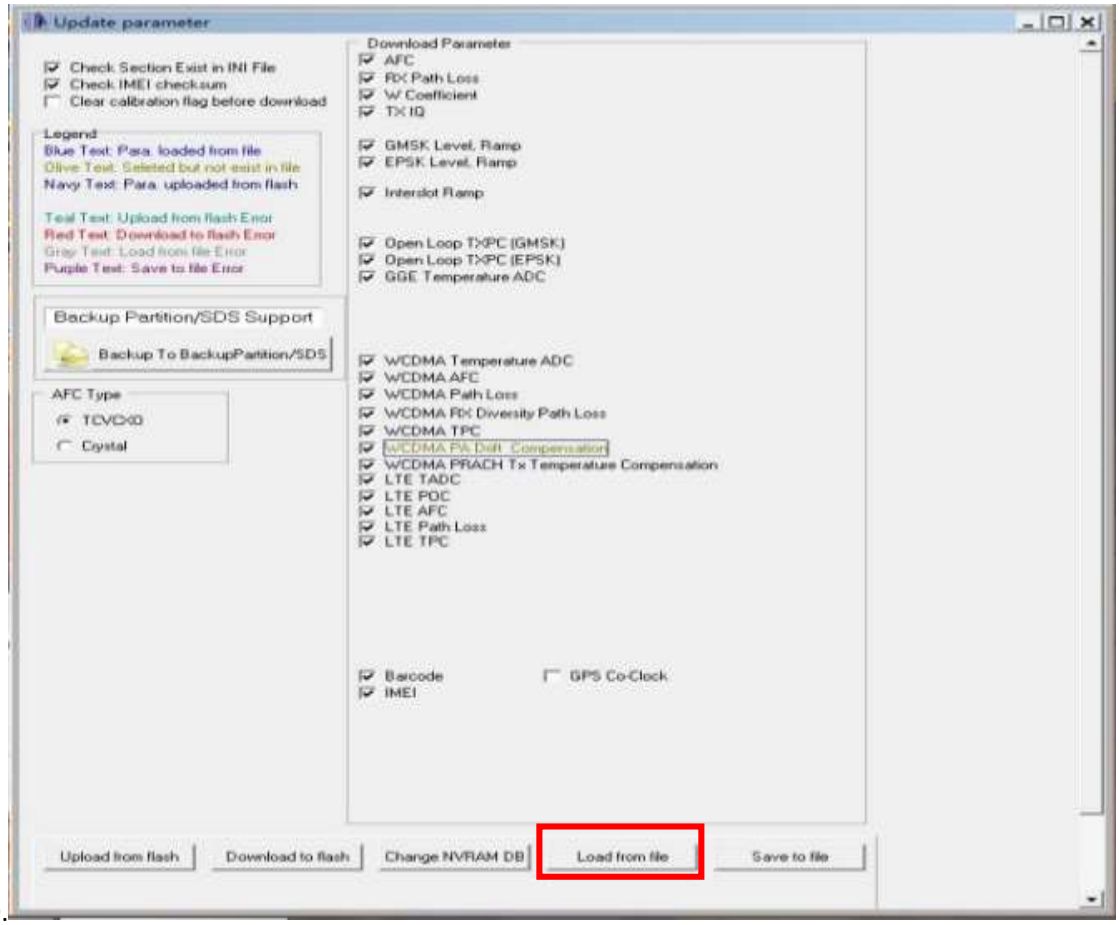9. 

10.Now connect the faulty handset which having CFT issue and click on Load from file and select (Ini file) which you have saved that file restore handset all calibration info.

11.Click "Download to flash", after flash click "Disconnect". Then disconnect the phone.